Installing Enviroclad Ceiling Cladding:

1. Install Timber (if required)
Fix battens to joists and entire perimeter (inc. window & door frames) at minimum 60cm centres and at 90⁰ to cladding.

2. Install Edge Trim
Fix Edge Trim where ceiling meets the wall **with longer edge to timber frame**, preferably using **screws and adhesive.**


3. Fit first Ceiling panel
Measure from inside of Edge Trim to inside of opposite Edge Trim - deduct 2cm. Cut first panel at this length.
Insert panel into Edge Trim, drop opposite end so it slides into opposite Edge Trim. Lift edge of Edge Trim with a pallet knife and push panel into corner where 2 Edge Trims meet. Continue to work panel into Edge Trim until it is fully seated.
N.B. Ensure first panel does not bow, as any bow will continue through all following panels.


4. Fit remaining panels
Measure & install remaining panels as above. Ensure tongue on leading edge fits securely into groove of preceding panel.

5. Install final panel
Before measuring, staple or screw edge of preceding panel to timber frame. Measure final panel as above, then measure from facing edge of preceding panel to inside of Edge Trim. Measure at various points along length of panel to allow for any variation. Transfer measurements to final panel, measured from front (tongue) edge. Cut to size. Use pallet knife to ease panel into Edge Trim, as Step 3. Push panel back to meet previous panel.

6. Finishing
Wash with mild detergent solution to clean and remove any static.

Recessed Lighting: Please note that only PL or CL type low energy downlighters are suitable for use with Enviroclad ceiling panels.

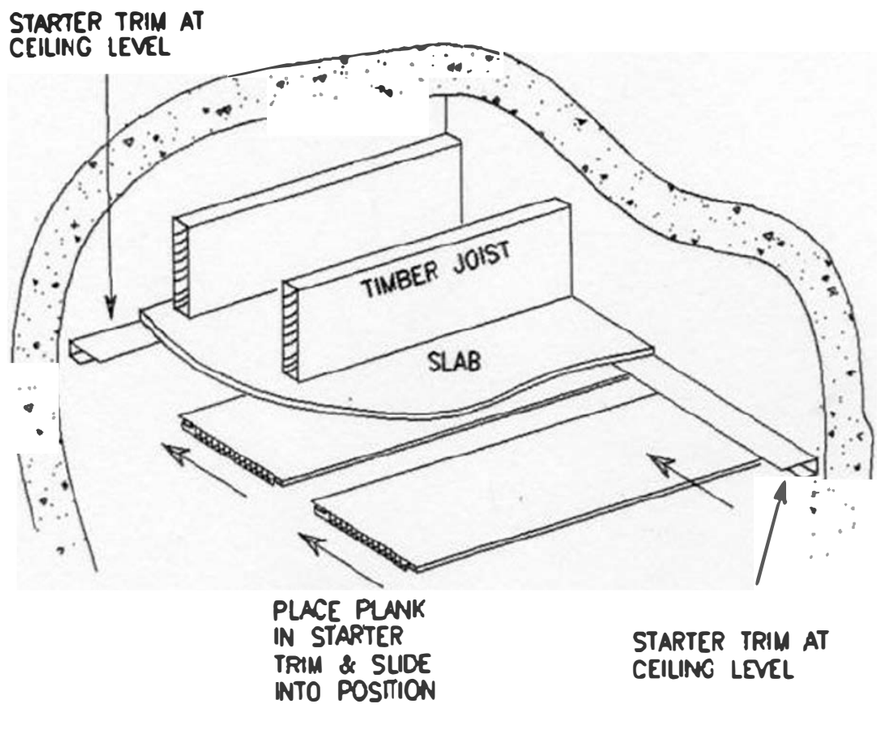

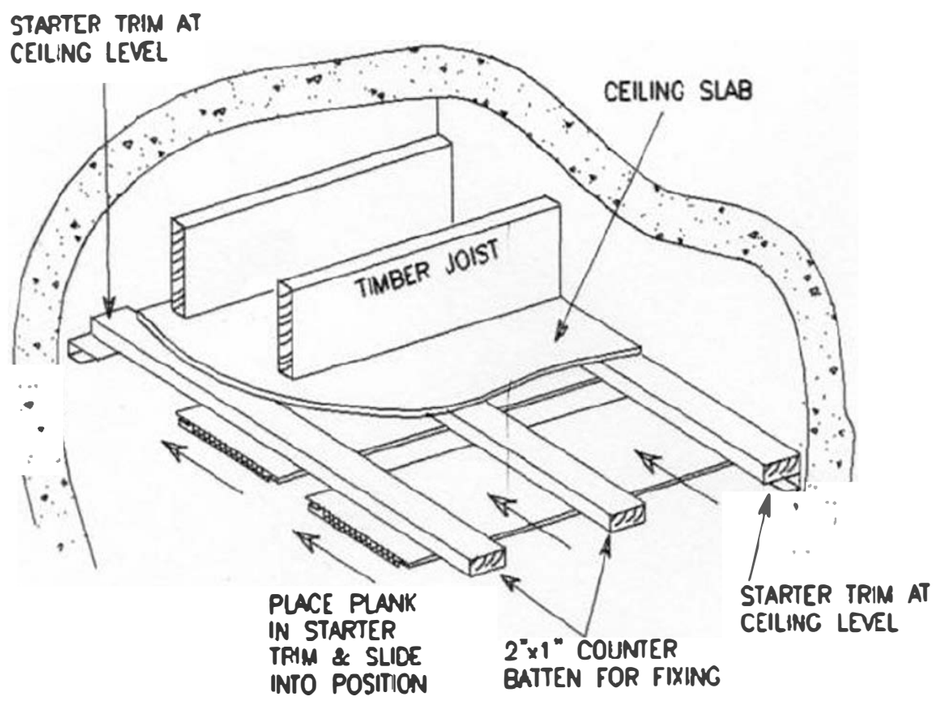

Unit 57b, Hebron Industrial Estate, Hebron Road,
Kilkenny Tel: 056 7752866 W: enviroclad.com